



How to setup a Zebra printer using the Zebra Setup Utilities

Applies to Zebra LP2824PLUS for Unibase use (50 x 25mm labels)


1. Run Zebra Setup Utilities. You should get the following screen (with perhaps only 1 printer listed):

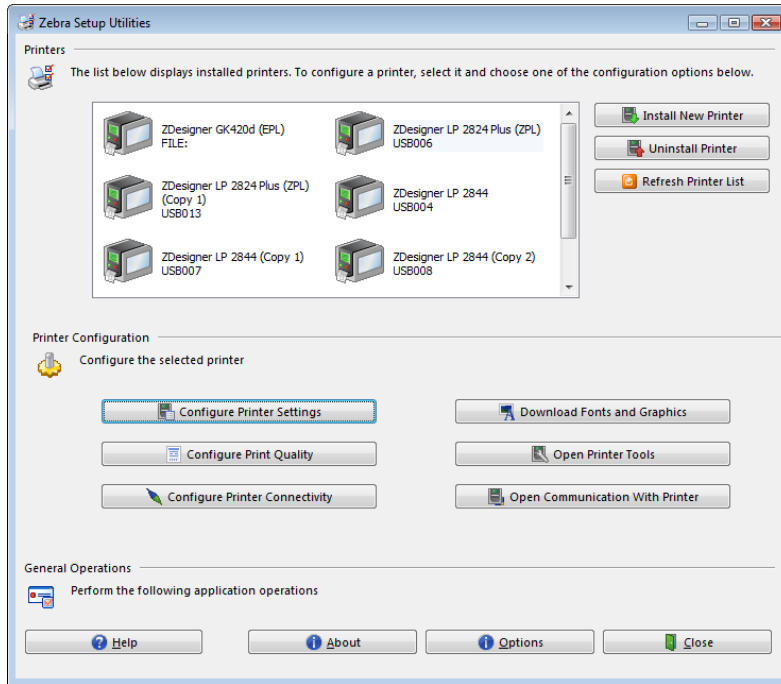


2. Double-click on your printer to get the Properties screen:

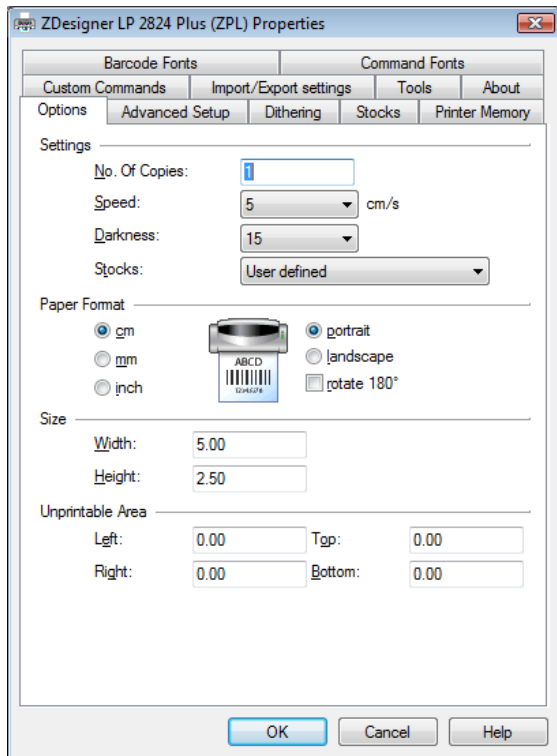

3. Click on the Tools tab:

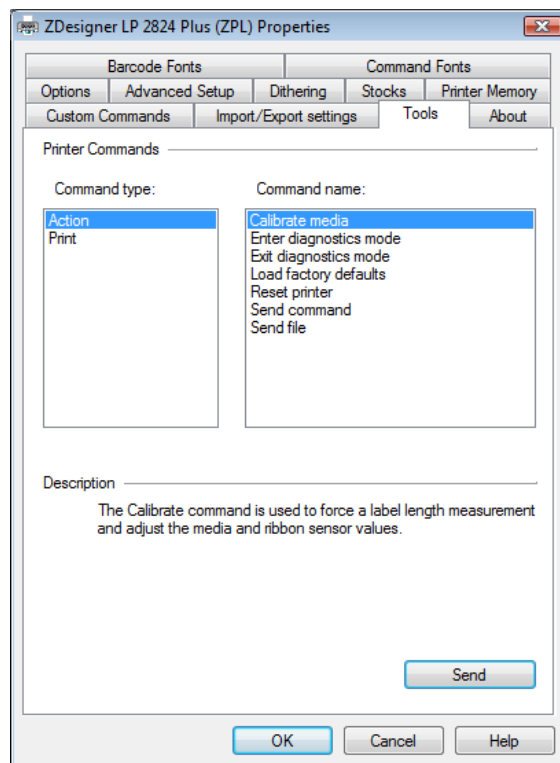

4. With "Action" selected and "Calibrate Media" selected, click the Send button to send a command to the printer which will (hopefully) do an auto calibrate on your printer.
5. If the above works, then all the parameters of the printer should look as follows. Go back to the main Zebra Setup Utilities, and click the "Configure Printer Settings" button. The setup should be close to the following, if not you can change some of the parameters:

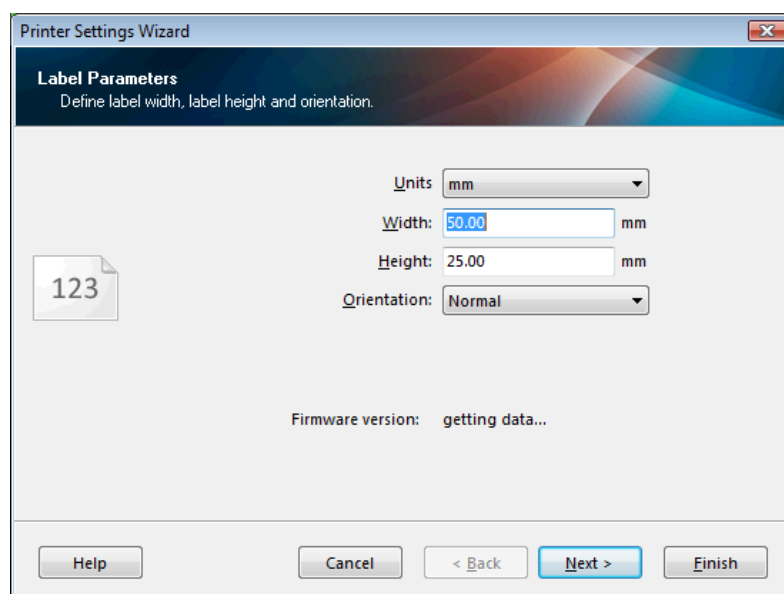

Printer Settings Wizard

Speed and Darkness
Select speed and darkness.

Speed: 50.8 mm/s
Darkness: 15



Help Cancel < Back Next > Finish

Printer Settings Wizard

Media
Set media parameters and handling.

Media Type: Web Sensing
Tear off adjust: 0.00 mm
Label Shift: 0.00 mm



To configure advanced settings, check the box below.
☒ Continue wizard with advanced settings

Help Cancel < Back Next > Finish

Printer Settings Wizard

Advanced settings
Configure advanced settings for your printer.

Media Handling: Tear Off
Every 0 label(s)
Media feed options: Feed to Next Label
Backfeed: Default settings
☐ Mirror Image
ZPL Mode: ZPL II



Help Cancel < Back Next > Finish

Printer Settings Wizard

Real Time Clock
Set real time clock parameters.

☐ Set Real Time Clock
☒ Set Real Time Clock To Computers Clock
☐ Set Real Time Clock To: 2014/01/22 11:02:02 AM



Help Cancel < Back Next > Finish

Printer Settings Wizard

Front Panel Protection
Define panel parameters you want to protect.

☒ Enable Darkness Mode
☒ Enable Position Mode
☒ Enable Calibration Mode
☒ Enable Pause
☒ Enable Feed
☒ Enable Cancel
☒ Enable Menu Changes



Help Cancel < Back Next > Finish

Printer Settings Wizard

Sensor Settings
Set media sensors.

Enter a value to change the sensor settings. Leaving a field empty will use the value set during the media calibration process.



Media Sensor (m/b): Range: 0 to 100
 Transmissive Gain (mZ): Range: 0 to 255
 Mark LED (d): Range: 0 to 255
 Mark Gain (a): Range: 0 to 255
 Ribbon Sensor (r): Range: 0 to 100
 Ribbon Gain (rZ): Range: 0 to 255

Help Cancel < Back Next > Finish

Printer Settings Wizard

Save settings
By pressing Finish your printer and driver will be updated.

To save your settings to a file on your computer, check the box below.

☐ Save settings to File



Help Cancel < Back Next > Finish